

Title:	How to call indoor station and hik-connect by access controller		
Product model:	DS-K1T501SF/DS-KH6310	Document version:	2018/11/15

Preparation

- ✓ IVMS4200 version: V2.7.2.7 build180919
- ✓ DS-K1T501SF firmware version: V1.1.0 build181115
- ✓ DS-KH6310 firmware version: V1.5.0 build180622

Introduction to Function

- ✓ Press call button on the access controller to call the indoor station and hik-connect
- ✓ Long press call button to call IVMS4200
- ✓ Answer and open door by hik-connect and indoor station

How to call indoor station and hik-connect by access controller


1) Add the devices to IVMS-4200

The screenshot displays the 'Adding Mode' configuration interface in IVMS-4200. It is divided into two sections, one for device KH6310 and one for device K1T501SF. Both sections have 'IP/Domain' selected as the adding mode. The KH6310 section includes fields for Nickname (KH6310), Address (10.7.114.228), Port (8000), User Name (admin), and Password (masked). The K1T501SF section includes fields for Nickname (K1T501SF), Address (10.7.114.180), Port (8000), User Name (admin), and Password (masked). Additionally, the K1T501SF section has checkboxes for 'Synchronize Device Time' (unchecked) and 'Export to Group' (checked). A note below the 'Export to Group' checkbox states: 'Set the device name as the group name and add all the channels connected to the device to the group.'

2) Add the access controller to hik-connect


1. Scan the QR code on the back of DS-K1T501.

2. Add the device

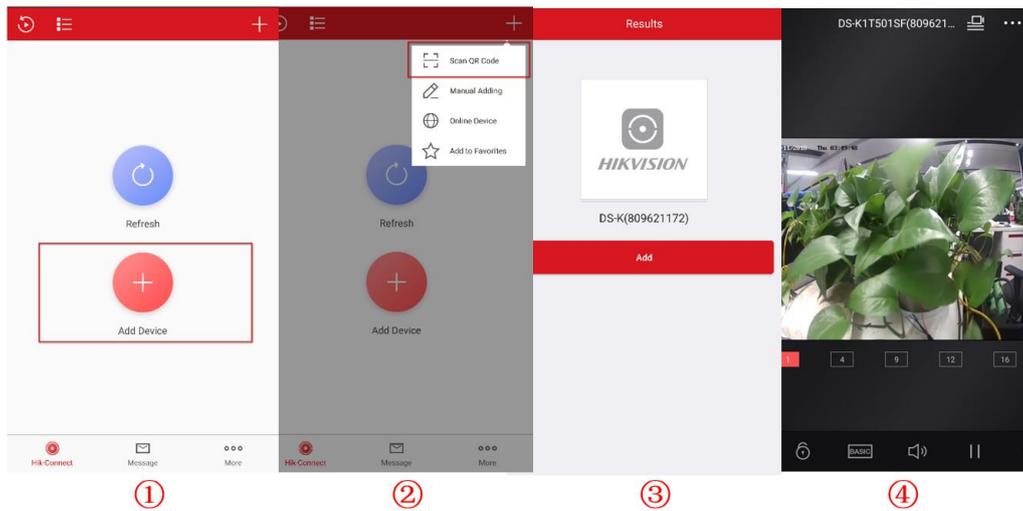


3) Configuration of access controller

1. Set device name as 100101.
system-general-device name.

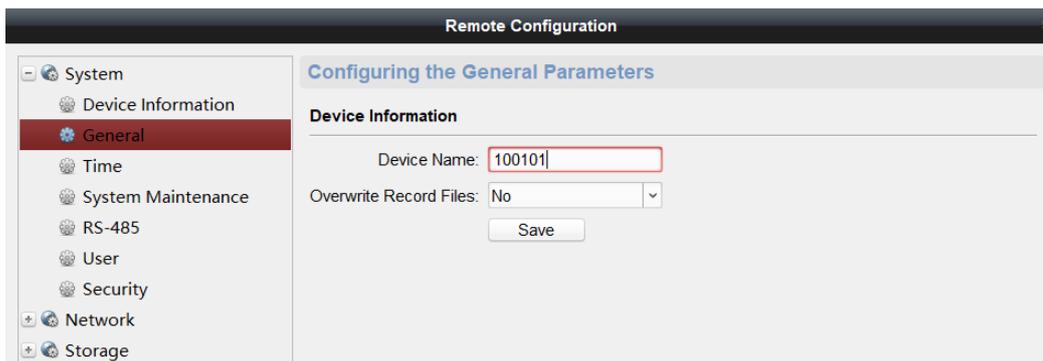


4) Configuration of indoor station

1. Set room number as 101
Intercom-ID configuration-room No

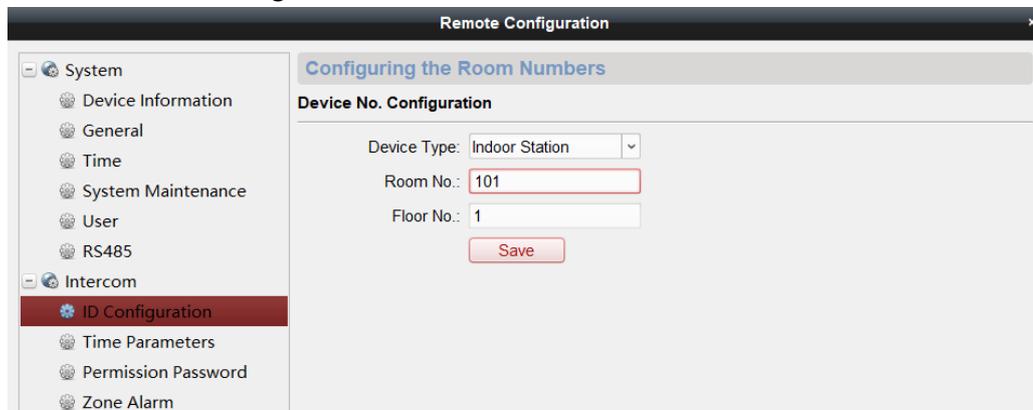

2. Link the indoor station with access controller.

Network-linked network configuration-(main)door station IP address.

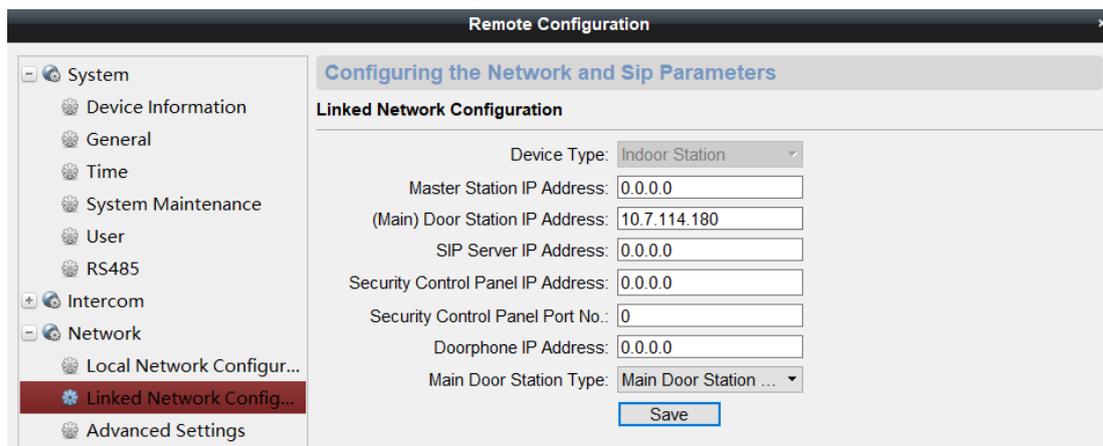


5) Card verification

Special function: when card authentication fails, the access controller calls the indoor station automatically.

You can trigger this function by enable “locking door when door closed”. Click the door name. Enter “Yes”.


Access control-advanced settings-door

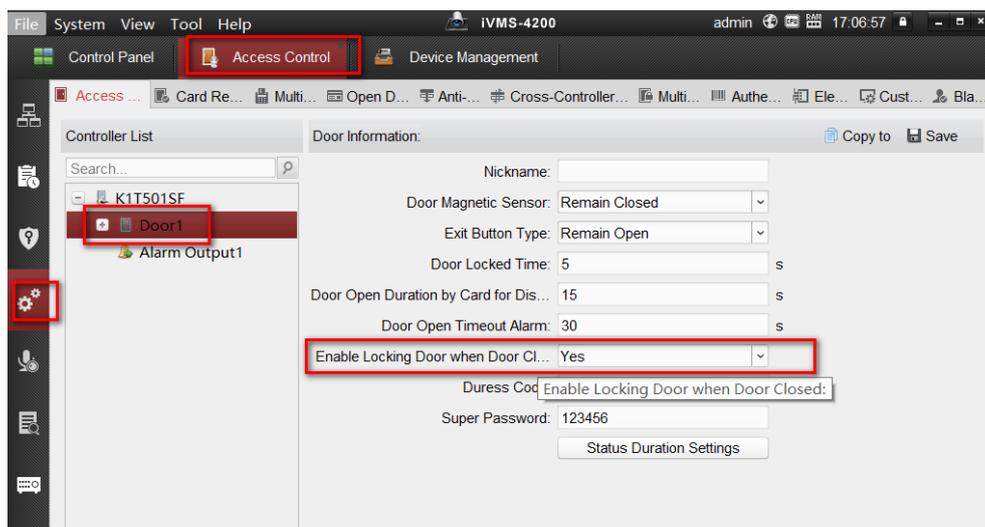

6) Open door

1. Open door on hik-connect (picture1)
2. Open door on indoor station (picture2)

*Pic1

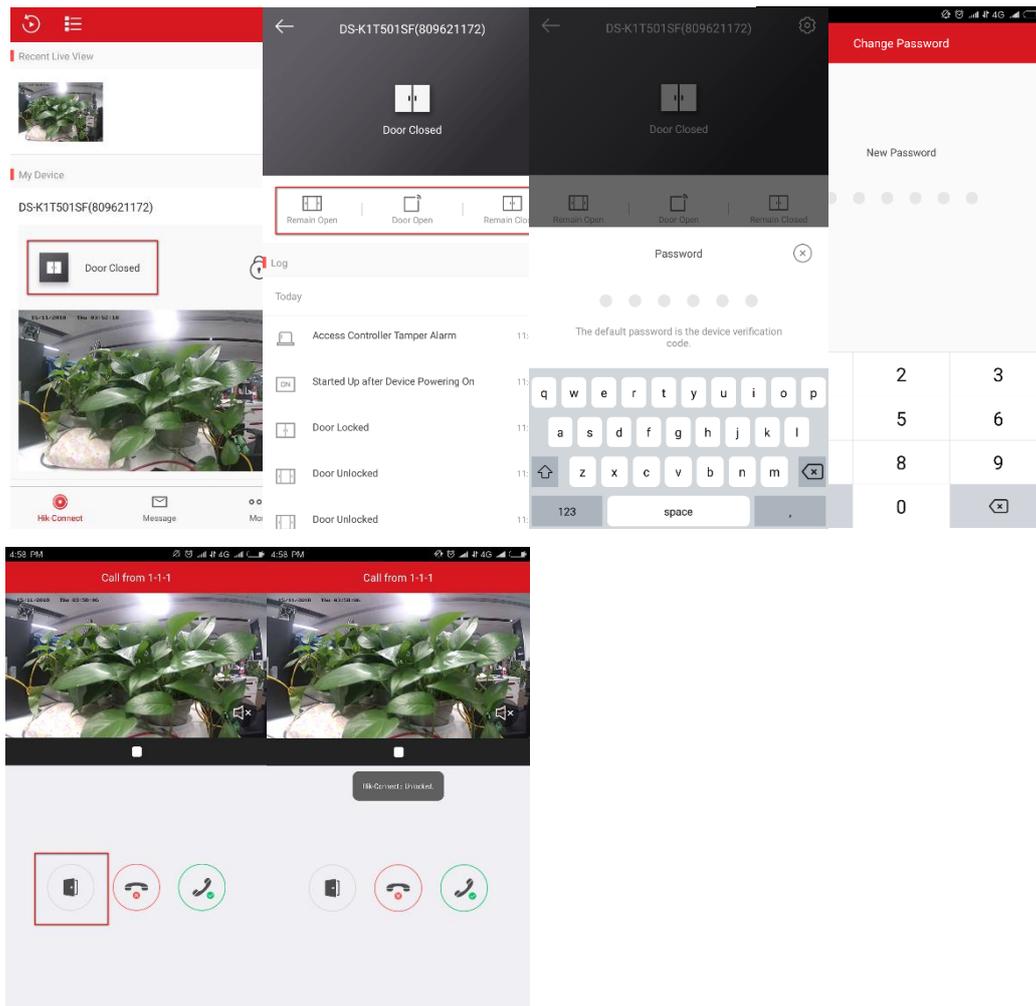

*Pic2



First Choice for Security Professionals
***HIKVISION* Technical Support**