

[NESS CORPORATION](#) > [Intercoms](#) > [Hikvision](#)

#### Articles in this section



# How to configure Hikvision Gen2 Intercom so both DS-KD8003 Door Station 104-928 (and DS-K1T607MW (Face Recognition with Door Station) 114-138 work together on one system.



Greg Kingsley

1 year ago

Follow

#### Configuration for DS-KD8003 Door Station.

(Example below Door Station is set to IP Address 192.168.0.103)

Firmware version was V2.0.5 Build 190522

Remote Configuration

System

Device Information

General

Time

System Maintenance

User

Configuring the General Parameters

Device Information

Device Name: OUTDOOR STATION

Device No.: 1

Save

Remote Configuration

System

Device Information

General

Time

System Maintenance

User

Intercom

ID Configuration

Time Parameters

Permission Password

Configuring the Room Numbers

Device No. Configuration

Device Type: Door Station

Project No.: 1

Community No.: 1

Building No.: 1

Floor No.: 1

No.: 0

Save

## Remote Configuration

### System

- Device Information
- General
- Time
- System Maintenance
- User

### Intercom

- ID Configuration
- Time Parameters
- Permission Password
- Access and Elevator Control
- IO Input/Output
- Volume Input/Output
- Dial
- Motion Detection
- Intercom Protocol
- Sub Module

### Network

- Local Network Configuration
- Linked Network Configuration

## Configuring the Local Network Parameters

### Local Network Configuration

Local IP Address: 192.168.0.103

IP Address Subnet Mask: 255.255.255.0

Default Gateway: 192.168.0.1

Port: 8000

HTTP Port: 80

Save

Remote Configuration

System

Device Information

General

Time

System Maintenance

User

Intercom

ID Configuration

Time Parameters

Permission Password

Access and Elevator Control

IO Input/Output

Volume Input/Output

Dial

Motion Detection

Intercom Protocol

Sub Module

Network

Local Network Configuration

Linked Network Configuration

FTP Settings

Configuring the Network and Sip Parameters

Linked Network Configuration

Device Type: Door Station

Master Station IP Address: 0.0.0.0

SIP Server IP Address: 0.0.0.0

Security Control Panel IP Address: 0.0.0.0

Security Control Panel Port No.: 0

Save

**DS-K1T607MW (Face Recognition with Door Station).**

(Example below DS-K1T607MW is set to IP Address 192.168.0.206)

Firmware version was V1.0.1 build 190506

Remote Configuration

System

Device Information

General

Time

System Maintenance

RS-485

User

Configuring the General Parameters

Device Information

Device Name: Access Controller

Save

Remote Configuration

System

Device Information

General

Time

System Maintenance

RS-485

User

Security

Network

General

Report Strategy

Network Center Configuration

Advanced Settings

Wi-Fi

Linked Network Configuration

Alarm

Configuring the Network and Sip Parameters

Linked Network Configuration

Master Station IP Address: 192.168.0.103

(Main) Door Station IP Address: 192.168.0.103

SIP Server IP Address: 0.0.0.0

Save

### Remote Configuration

General

Time

System Maintenance

RS-485

User

Security

Network

General

Report Strategy

Network Center Configuration

Advanced Settings

Wi-Fi

Linked Network Configuration

Alarm

Relay

Other

Face Recogniti...nal Parameters

Configuring Fa...ure Parameters

Supplement Light Parameters

Device Room No Config

Image

Configuring the Room Numbers

Device No. Configuration

Project No.: 1


Community No.: 1

Building No.: 1

No.: 0

Save

Indoor Station was set to;

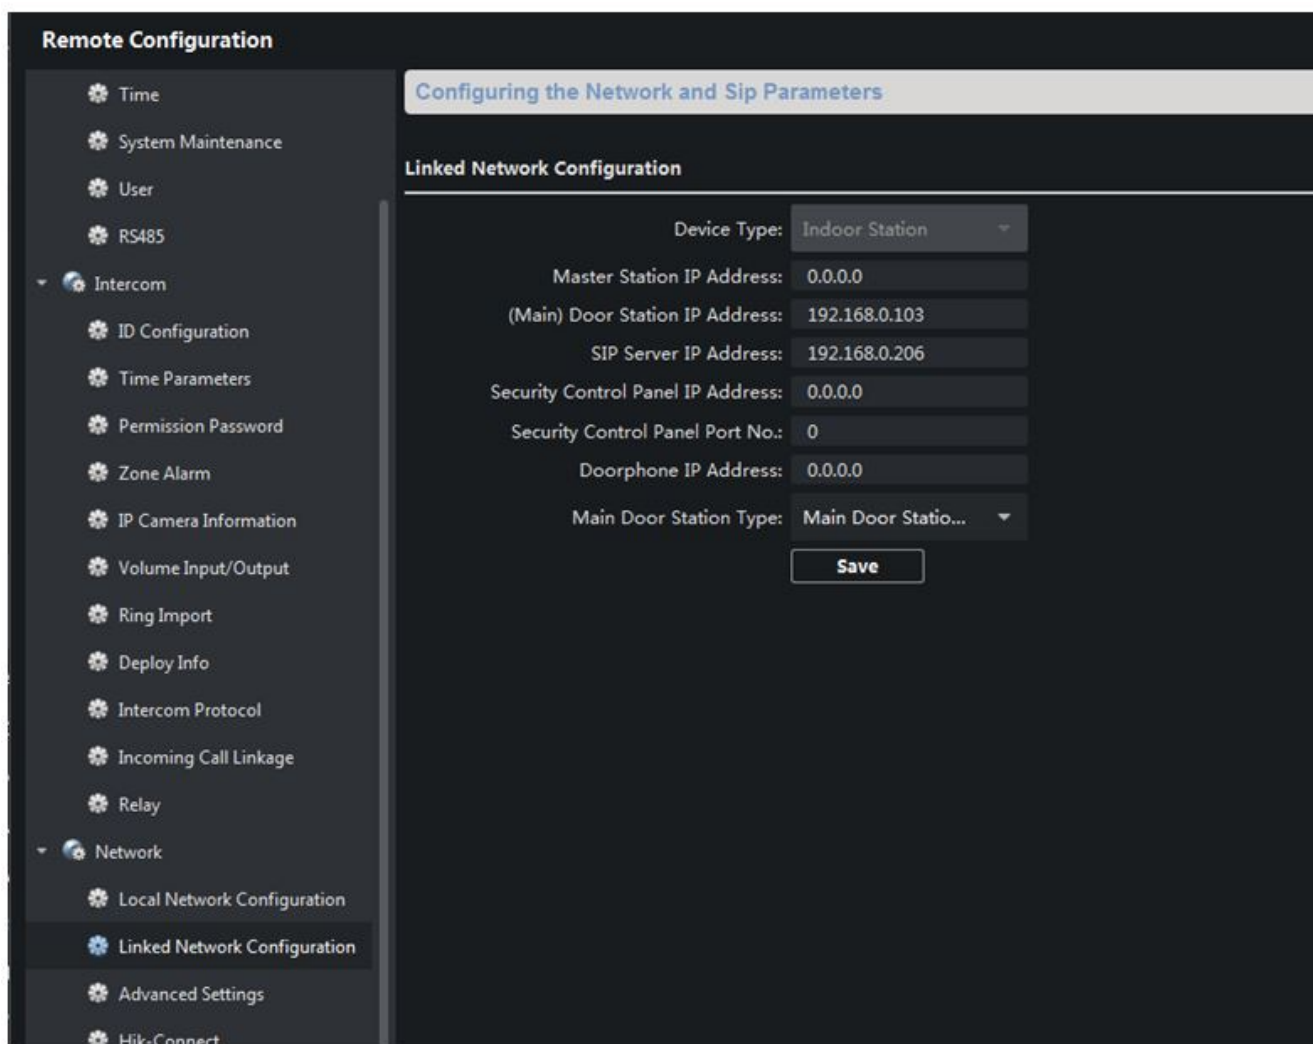

Was this article helpful?

Yes

No

0 out of 0 found this helpful

Have more questions? [Submit a request](#)

[Return to top](#) ^

**Recently viewed articles**

[How to Connect a Door Station in Door Phone Mode to Indoor Station](#)

[Hikvision Apartment Intercom - How to Change Unlocking Password.](#)

[What is the maximum cable distance on a Hikvision 2 Wire Intercoms System?](#)

[How to Configure GEN 2 Intercom Sub Module Addresses](#)

[Hikvision 2-Wire Intercom Wiring](#)

## **Related articles**

[Hikvision Video Intercom 2nd Gen Firmware](#)

[How to add IP Cameras to Hikvision Intercom Room Station](#)

[How to Configure GEN 2 Intercom Sub Module Addresses](#)

[Hikvision DS-KH6320-WTE1 7" Gen2 Video Intercom Room Station \(104-934, 104-938\)](#)

[How to Connect a Door Station in Door Phone Mode to Indoor Station](#)

---

## **Comments**

0 comments

---

Article is closed for comments.

---

NESS CORPORATION